PENDOPAD 9.7"

DUAL CORE

Movie
VIDEO
Browser
Game
Email
Aldiko
Browser
Calculator
Clock
Email
Settings
OfficeSuite
People

ANDROID 4.0
ICE CREAM SANDWICH

QUICK START GUIDE & USER MANUAL

> Please read carefully before use

pendo

Table of Contents

THANK YOU 3

Package Contents 3

Features 4

GETTING TO KNOW THE PENDO PAD 5

About the Touchscreen 6

  Protective Film 6

  Touchscreen Actions 6

About the Orientation Sensor 7

Charging the Pendo Pad 7

Inserting a Memory Card 8

Resetting the Pendo Pad 9

GETTING STARTED 10

Turning the Pendo Pad On and Off 10

  Turning the Screen On and Off (Standby) 10

  Unlocking the Screen 10

Home Screen at a Glance 12

About Applications 13

  Preinstalled Applications 13

  Installing Applications 15

About Widgets 15

About Notifications 16

CONNECTING TO THE INTERNET 17

Requirements 17

Connect to a Wi-Fi network 17

BROWSING THE WEB 20

MANAGING APPLICATIONS 25

OPTIONAL CONNECTIONS 28

Connecting to a Computer 28

Connecting to a TV 29

Connecting Headphones 29

Using the USB Full-Size Adapter 30

  Connecting a Keyboard 30

  Connecting a Storage Device 30

SETTING THE SYSTEM OPTIONS 31

SPECIFICATIONS 32

SUPPORT 33

Thank You

Congratulations on your purchase of a Pendo Pad.

For detailed instructions, up-to-date information, and helpful tips, please visit the Pendo website at www.pendo.com.au.

This manual is available for download from the Pendo website as a PDF file.
To view PDF documents, download and install the free Adobe Acrobat reader from the Adobe website at www.adobe.com.

Package Contents

Please make sure that the items shown below are included in the package. Should an item be missing, please contact the local retailer from which you purchased this product.

- Pendo Pad
- Protective pouch
- USB cable
- USB host/keyboard adapter
- Earphones
- Power adapter

This package may contain plastic bags or other materials that pose a hazard to children. Be sure to safely dispose of all packing materials after opening.

Features

◆ Browse the Web.
Visit your favorite websites

◆ Check your e-mail
Keep in touch with friends and family

◆ Watch YouTube™ videos
Browse the world's most popular video-sharing community

◆ Read your favorite books
Download thousands of books with the included E-book reader *

◆ Discover thousands of apps for Android™
Games, applications, and more!

◆ HDMI output to your TV **
Enjoy videos, photos and more in the comfort of your living room

◆ Connect to the Internet wirelessly
High-speed Wi-Fi 802.11 b/g/n networking

◆ Enjoy your media library anywhere
Portable powerhouse plays popular music, video, and photo formats

◆ microSDHC memory card reader
Increase your storage capacity (up to 32 GB supported)

◆ Two built-in cameras
Convenient front-facing camera and rear facing camera

◆ Automatic orientation detection
Read any way you want; the display adjusts automatically!

---

* Reading books in the ePub format requires the included E-book reader application.

** Requires optional HDMI cable (Type A-to-Type C). 1080p HD video playback requires a video file encoded at 1080p. Streaming video quality will be affected by the source, and the quality and condition of your network connection.

Getting to know the Pendo Pad

Unit at a Glance

	Name	Description
1/12	Camera	Front and Rear Facing Cameras
2	Camera	Rear-facing camera
3	Volume + key	Press to increase the volume level.
4	Volume – key	Press to decrease the volume level.
5	Power key	Press to turn the unit on, or to turn the screen on and off. Press and hold to access the Power Off menu.
6	Speaker	Speaker output is automatically muted when using headphone Jack.
7	Power jack (DC input)	Charge and power the tablet with the included power adapter.
8	microSDHC card slot	Load external microSDHC memory cards here.
9	USB 2.0 Hi-speed port	Connect to a computer to transfer data (e.g., music, videos, photos, files).
10	HDMI jack (mini Type C)	Connect to a TV or other display.
11	Headphone jack	Audio output connection for headphones. *Note: Speaker output is automatically disabled when headphones are connected to the player.*

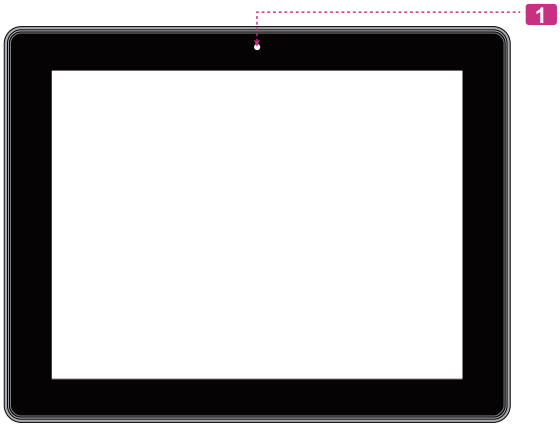

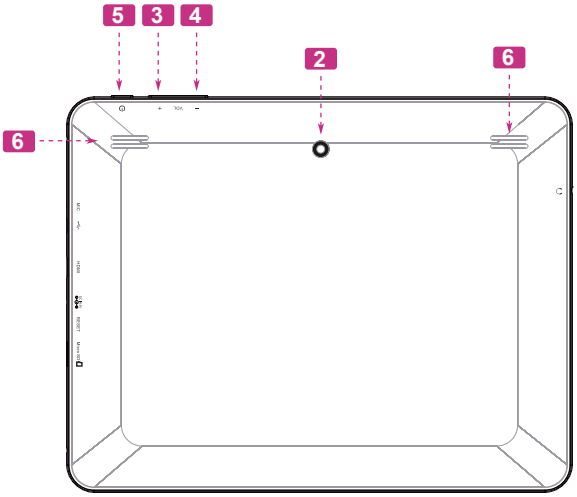



About the Touchscreen

Your Pendo Pad comes equipped with an easy-to-use touchscreen.

Our capacitive multi-touchscreen requires gentle fingertip touch on the glass screen to activate Pendo Pad's functions. Multiple fingers may be used to perform gestures (e.g. 2-finger picture zoom).

Please note: Your fingertips must not be covered. A stylus may be used. Make sure it is for capacitive touchscreens.

> *To avoid damaging the screen, do not touch it with excessive force or with any object other than your finger. For best response, make sure your hands are clean before using the touchscreen controls.*

Protective Film

A thin film has been applied to the touchscreen to protect it during shipping. The protective film should be removed before use. To remove it, simply take a corner of the film and peel it away from the screen.

Touchscreen Actions

You can control the functions of the Pendo Pad by using the touchscreen in combination with the three touch keys located on the bezel. To control the Pendo Pad with the touchscreen, use your fingertip to manipulate icons, buttons, menu items, the on-screen keyboard, and other items displayed on the screen.

You can perform the following actions on the touchscreen using your fingertip or appropriate stylus.

Touch:	To activate an on-screen item (e.g., application icons, buttons, menu items, and the letter/symbols of the on-screen keyboard), simply touch them with your fingertip.
Touch and Hold:	Some on-screen items have an alternate action if you touch and hold it (e.g., opening an alternate menu, or to activate the drag function). To touch and hold an item, touch the item and do not lift your fingertip until the action occurs.
Drag:	Drag an on-screen item to change its position (e.g., an application icon on the home screen). To drag an item, touch and hold it for a moment, then without lifting your fingertip, move your fingertip on the screen until the item reaches its target destination.
Swipe:	Swipe up/down on the screen to scroll through a list. On some screens, you may be able to swipe left/right to change the view. To swipe, touch the screen and then quickly move your fingertip across the screen without lifting your fingertip. Do not pause on the screen with your fingertip at the initial point of contact or you may accidentally drag an item instead.

Double-tap:	Quickly tap the screen twice on a webpage or other application screen to zoom (the application must support the double-tap/zoom function). Within the browser, double-tapping a webpage section will cause the browser to zoom and fit that section to the width of the screen.

About the Orientation Sensor

The Pendo Pad contains a sensor that will automatically change the orientation of most screens as you rotate the pad. The sensor works best when the pad is rotated perpendicular to the ground (i.e., when the pad is held upright and not fat on its back).

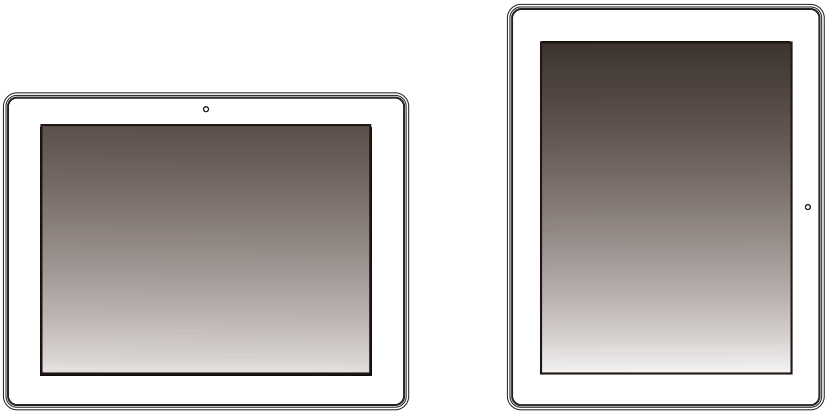

The orientation sensor can be turned on and off in the **Display** settings menu.

Charging the Pendo Pad

The Pendo Pad comes with a built-in rechargeable lithium-polymer battery.

Before using the Pendo Pad, the battery should be charged fully. The Status Indicator will light blue when the battery is charged fully.

To charge the battery:

Plug one end of the included power adapter into an AC 100-240V outlet.

Plug the other end of the included power adapter into the Power jack on the pad.

Disconnect the power adapter when the pad is fully charged.

> *The battery used in this device may present a fire or chemical burn if mistreated. Do not disassemble, incinerate, or heat the device. Do not leave the device in a place subject to direct sunlight, or in a car with its windows closed. Do not connect the device to a power source other than that which is indicated here or on the label as this may result*

in the risk of fire or electric shock.

Inserting a Memory Card

The Pendo Pad accepts microSDHC memory cards. Insert a memory card into the microSDHC card slot to:

Increase the memory capacity of your pad

Play media files stored on the memory card (e.g., music, video, or photo files).

To insert a memory card:

Align the memory card with the card slot. The metal contacts of the memory card should face down away from the LCD screen.

Slide the card into the spring-loaded slot. Push the card in until it clicks into place.

> *Do not attempt to insert objects other than a microSDHC memory card into the card slot. A compatible memory card should fit easily into the card slot; if you encounter resistance, check the alignment of the card. Do not attempt to force the card in.*
>
> *Avoid touching the gold contacts of the memory card.*

To release and remove a memory card:

UNMOUNT the memory card.

a. From the home screen, tap the **Launcher Tab**, and then touch **Settings** to show the settings menu.

b. Touch **Storage** to show the storage settings.

c. Touch **Unmount SD card** to prepare the memory card for safe removal.

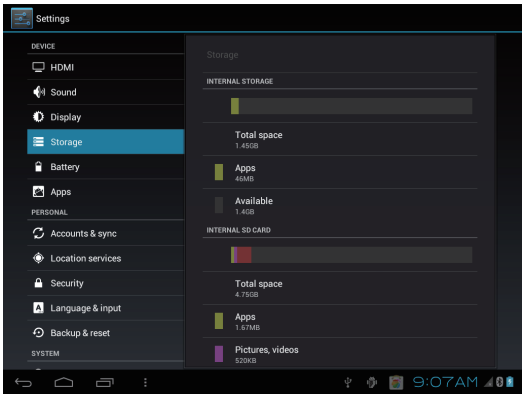
Settings
DEVICE
HDMI
Sound
Display
Storage
Battery
Apps
PERSONAL
Accounts & sync
Location services
Security
Language & input
Backup & reset
SYSTEM
9:07AM

Storage

INTERNAL STORAGE

Total space
1.45GB

Apps
46MB

Available
1.4GB

INTERNAL SD CARD

Total space
4.75GB

Apps
1.67MB

Pictures, videos
520KB

Push the card further into the slot until you hear a click. The card will spring out of the slot.

Grasp the card by its edge to remove it.

To avoid damage and data corruption, do not remove a memory card while data is being written to or read from the card. For example, do not remove a card while playing a music file stored on the card.

Resetting the Pendo Pad

Reset the Pendo Pad if it should freeze and not respond or otherwise malfunction.

1. Disconnect your pad if it is connected to a computer.
2. Press and hold the POWER key for about 8 seconds to turn off the pad, and then press and hold the POWER key about 3 seconds to turn on the pad.

Getting Started

Turning the Pendo Pad On and Off

To turn the Pendo Pad on:

- Press and hold the **Power** key until the LCD screen turns on. Wait until the Home screen appears; the pad is now ready for use.

To turn the Pendo Pad off:

1. Press and hold the **Power** key until the confirmation message appears.

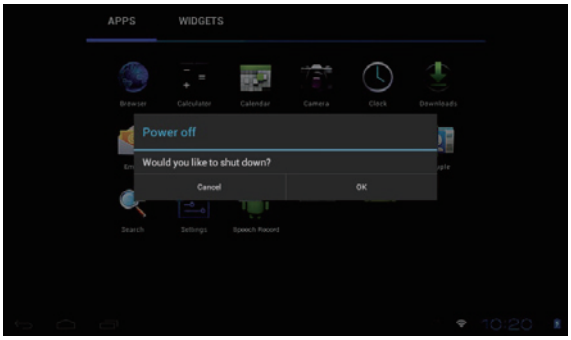

Power off

Would you like to shut down?

APPS
WIDGETS
Browser
Calculator
Calendar
Camera
Clock
Downloads
Cancel
OK
Search
Settings
Speech Record
10:20

2. Touch **OK** to turn off the pad.

Turning the Screen On and Off (Standby)

When the pad is on, you can turn off the screen to conserve battery power. Simply press the **Power** key once to turn the screen off. Press the **Power** key again to turn the screen back on.

Unlocking the Screen

When the screen turns off, you will have to unlock the screen when you turn it back on.

To unlock the screen, touch and drag the **lock** icon to the edge of the circle that appears.

> *To conserve battery power, the screen can be set to turn off automatically when the pad is not in use (between 15 seconds and 30 minutes). This* **Sleep** *option can be found in the* **Display** *menu.*

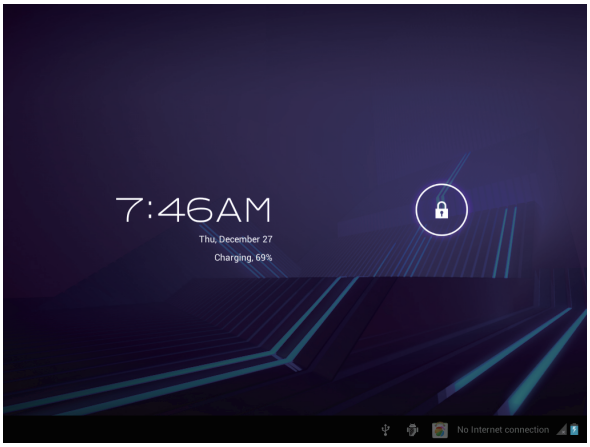
7:46AM
Thu, December 27
Charging, 69%
No Internet connection

If a password has been set, enter the password to finish unlocking the screen. The Screen Unlock password can be set in the **Security** settings menu.

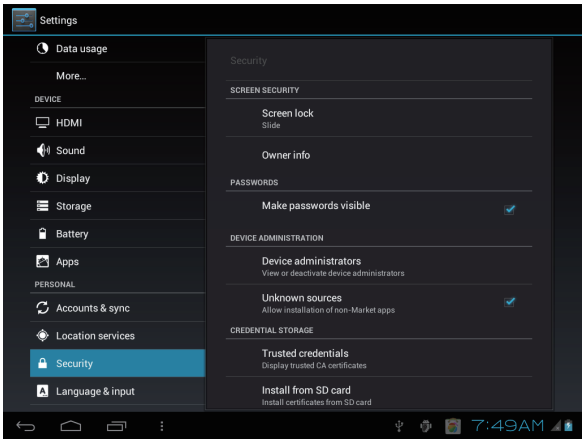
Settings
Data usage
More...
DEVICE
HDMI
Sound
Display
Storage
Battery
Apps
PERSONAL
Accounts & sync
Location services
Security
Language & input
7:49AM

Security

SCREEN SECURITY

Screen lock
Slide

Owner info

PASSWORDS

Make passwords visible ☑

DEVICE ADMINISTRATION

Device administrators
View or deactivate device administrators

Unknown sources ☑
Allow installation of non-Market apps

CREDENTIAL STORAGE

Trusted credentials
Display trusted CA certificates

Install from SD card
Install certificates from SD card

WARNING: Please write down your password lock pattern/PIN/Password. Misplacing or forgetting this method will lock the user out. Recovering the unit will reset the device back to factory defaults. **ALL YOUR DATA & PROGRAMS WILL BE LOST**.

Home Screen at a Glance

The home screen is the starting point for all of the features of your Pendo Pad.

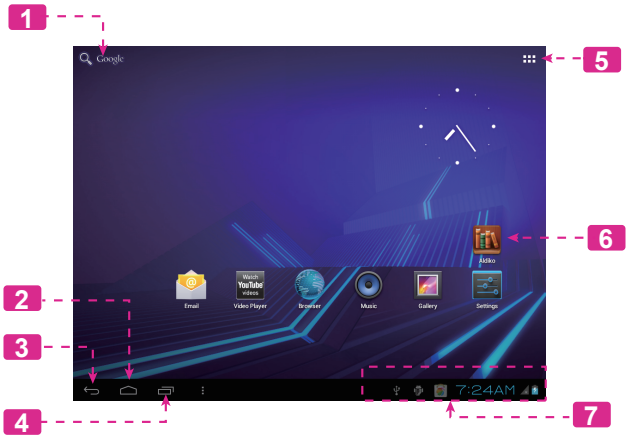

Name		Description
1	**Google Search**	Touch to search with Google browser.
2	**Home** icon	Touch to back to the central Home Screen.
3	**Back** icon	Touch to back to the previous screen.
4	Recent Apps	Touch to display the list of thumbnail images of apps you have worked recently. Touch an App to open it.
5	Launcher Tab	Open the Launcher to view the list of all Applications and Widgets installed on the pad. Touch the Launcher tab to open the Launcher.
6	Icons	Touch an icon to open an application or folder.
7	Notification bar	Shows notification icons such as time, battery level, and the network signal strength; touch the bar to open the full Notifications panel. Touch a Notification icon to display more detail.

About Applications

To open an application, touch the application icon on the home screen or in the Launcher.

Launcher screen:

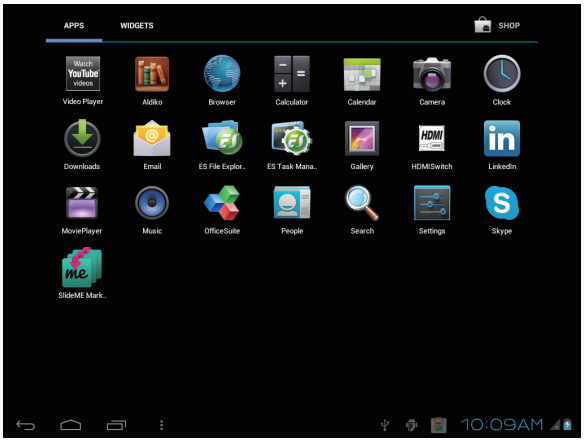
APPS
WIDGETS
SHOP
Video Player
Aldiko
Browser
Calculator
Calendar
Camera
Clock
Downloads
Email
ES File Explor..
ES Task Mana..
Gallery
HDMISwitch
LinkedIn
MoviePlayer
Music
OfficeSuite
People
Search
Settings
Skype
SlideME Mark..
10:09AM

The screen shown above is for illustrative purposes only. Pendo reserves the right to modify and improve the final list of applications available on the pad.

Preinstalled Applications

Some applications have been installed on your Pendo Pad for your convenience. These applications include:

Aldiko	Download and read thousands of e-books. Supports the ePub standard.
Browser	Browse the web.
Calendar	Display the calendar or record events and appointments to manage your schedule.

Calculator	Perform simple mathematical operations.
Camera	Take pictures or videos with the front-facing camera.
Clock	View the current time, or set an alarm.
Email	Check your e-mail.
ES File Explor..	View and manage files stored on the tablet. Visit http://www.estrongs.com/en/products/file-explorer.html for more information.
ES Task Mana..	Turn off background apps to conserve battery power. Visit http://www.estrongs.com/en/products/task-manager.html for more information.
Gallery	View photos and videos, plus edit photos.
	Access to thousands of apps with SlideME Marketplace.
Music	Play music.

Settings	Access the Settings menu to adjust the pad's options.
Watch YouTube videos	Launch the mobile YouTube™ browser page to watch internet videos.

Installing Applications

You can also download and install additional applications from the device's applications marketplace, the web browser, or other sources.

The pad must be set to allow installation of applications from non-Market sources. The Unknown sources option can be set in the **Application settings** menu.

> *Your Pendo Mobile Internet Device may include access to, or information on, content, products, applications and services from third parties. Your use of such third party content, products, applications and services is at the discretion of such third party and expressly governed by such third party's terms of use, including any such third party's privacy policies, for such content, products, applications and services. Pendo is not responsible for and expressly disclaims all warranties of any kind with respect to all such third party content, products, applications and services. Pendo will not be responsible for any loss, costs, or damages incurred due to your access to or use of third party content, products, applications or services.*

About Widgets

Widgets are self-contained applications that you can place on the Home screens to access your favorite features.

Adding Widgets to a Home Screen

Navigate to the Home screen which you want to place the Widget on.

Touch the **Launcher Tab**.

Touch **WIDGETS** to show all widgets, and then hold on a widget icon to add it to the Home screen.

Remove

Removing Widgets

Touch and hold the Widget until Remove icon appears at the top side of the screen, then drag the Widget to the Remove icon to remove it.

About Notifications

The icons that appear in the Notification bar at the bottom right corner of the screen alerts you when new messages arrive or alarms or other application events occur.

View and respond to the notifications by opening the full Notifications panel.

Touch the **Notification** bar to open the Notifications panel.

To respond to a notification:

- Touch a notification in the list; the Notifications panel will close and the application associated with the notification will launch.

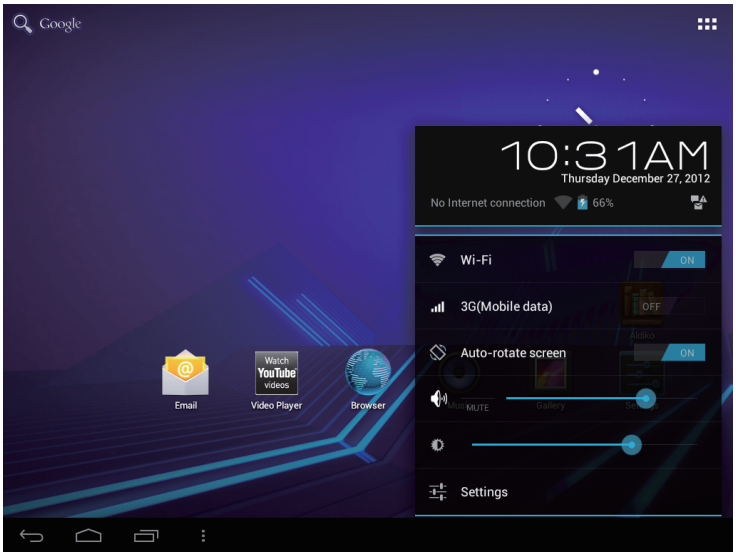

10:31AM
Thursday December 27, 2012
No Internet connection 66%
Wi-Fi ON
3G(Mobile data) OFF
Auto-rotate screen ON

To close the Notifications panel:

- Touch any other area of screen except the Notifications panel , or;
- Touch the Back icon.

Connecting to the Internet

This Pendo Pad can utilise Wi-Fi data networks to connect to the Internet.

- Wireless Wi-Fi technology can provide Internet access at distances of over 300 feet; however, this distance can be affected by your surrounding environment and Wi-Fi router.

Requirements

In order to connect to the Internet, you will need either of the following:

A wireless router or access point with a broadband Internet connection

The wireless router must support Wi-Fi 802.11b/g connections. If the router supports 802.11n, make sure that it has been configured to accept 802.11b/g connections as well.

A minimum connection speed of 64 Kbps is recommended. Faster speeds will enable a better Internet experience.

You will need to know the name of your network (SSID), as well as the password or other credentials if your network is secured. These settings can usually be found on the administration webpage of your wireless router.

Please refer to your wireless router's documentation for help, or ask your network administrator for details.

You may encounter open Wi-Fi networks, or "hot spots." These networks are usually configured so that you can simply connect to them without needing to know its settings; the pad will obtain all the information it needs from the router automatically.

Connect to a Wi-Fi network

The Notification bar displays icons that indicate your Pendo Pad's Wi-Fi status.

📶	Connected to a Wi-Fi network (waves indicate connection strength).
[no icon]	There are no Wi-Fi networks in range, or the Wi-Fi radio is off.

1. **Turn on the Wi-Fi radio if it is not already on. To turn on Wi-Fi:**
    a. Go to the Home screen:

       Touch the **Home** icon.

b. Open the Launcher screen:

Touch the **Launcher Tab**, then touch **Settings**.

c. Open the Wireless & networks menu:

Touch **WIRELESS & NETWORKS**.

d. Open the Wi-Fi settings menu:

Touch **Wi-Fi**.

e. Make sure that the Wi-Fi option box is set to ON: Touch and slide the block right to enable the **Wi-Fi** connection.

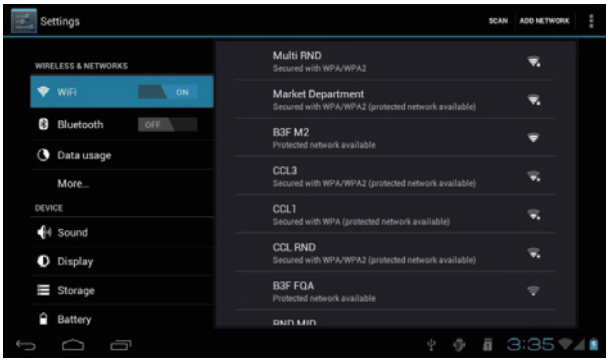

WiFi ON

Bluetooth OFF

Multi RND
Secured with WPA/WPA2

Market Department
Secured with WPA/WPA2 (protected network available)

B3F M2
Protected network available

CCL3
Secured with WPA/WPA2 (protected network available)

CCL1
Secured with WPA (protected network available)

CCL RND
Secured with WPA/WPA2 (protected network available)

B3F FQA
Protected network available

When Wi-Fi is on, the pad will look for and display a list of available Wi-Fi networks.

If a network that you have connected to previously is found, the pad will connect to it.

If you don't see your network in the list, you can force the pad to re-scan. To scan for networks, tap the **SCAN** *icon that located on the top right corner of the screen.*

2. Select an available Wi-Fi network to connect to:

In the same Wi-Fi settings menu above, touch a network in the list.

If the network is open, the pad will prompt you to confirm connection to the network. Touch **Connect** to confirm.

If the network is secured (as indicated by a Lock icon), the pad will prompt you to enter a password or other credentials. Touch the Wireless password box to show the on-screen keyboard and then use it to enter the password. Touch **Connect** to confirm.



When you have successfully connected to a Wi-Fi network, the Notifications bar at the bottom of the screen will show a Wi-Fi signal indicator.

> *To learn about how to add a Wi-Fi network when it is not in range or when the router is set to obscure the network name (SSID); or to configure advanced Wi-Fi options, please refer to the manual.*

Bluetooth connection

Turn on the bluetooth if it is not already on.

To turn on bluetooth:

a. Go to the Home screen: Touch the **Settings** icon.

b. Open the Launcher screen:
   Touch the **Launcher Tab**, then touch **Settings**.

c. Open the Notificationbar menu:
   Touch **bluetooth icon** .

When bluetoorh is on, the tablet will look for and display a list of available bluetooth devices.

Select an available bluetooth device in the list to connect to.

If the bluetooth device is secured (as indicated by a Lock icon), the tablet will prompt you to enter a password or other credentials. Touch the bluetooth password box to show the on-screen keyboard and then use it to enter the password. Touch **OK** to confirm.

When you have successfully connected to a bluetooth device the Notifications bar at the bottom of the screen will show a signal indicator.

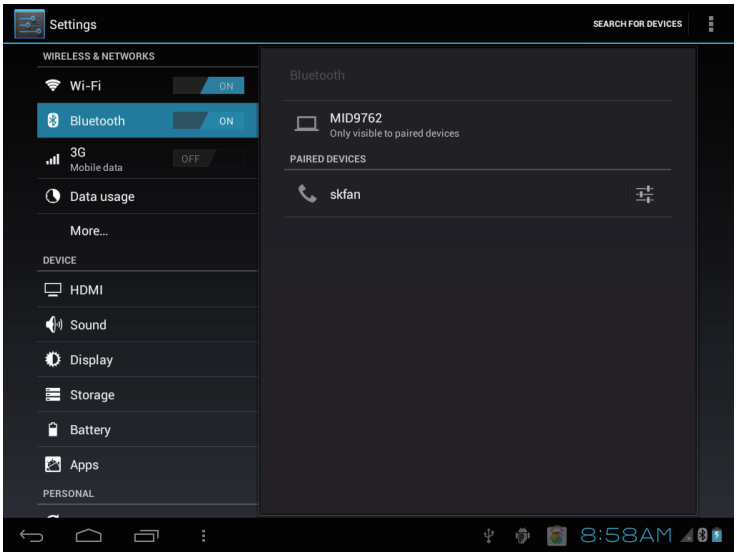

Settings

SEARCH FOR DEVICES

WIRELESS & NETWORKS

Wi-Fi ON

Bluetooth ON

3G Mobile data OFF

Data usage

More...

DEVICE

HDMI

Sound

Display

Storage

Battery

Apps

PERSONAL

Bluetooth

MID9762
Only visible to paired devices

PAIRED DEVICES

skfan

8:58AM

Browsing the Web

The Browser application lets you visit webpages and find information on the web. Keep up with the news, your friends, or enjoy video from YouTube™, the world's most popular video-sharing community.

To use Browser, the Pendo Pad must be connected to the Internet. Read the section "Connecting to the Internet" to learn how to connect to the Internet.

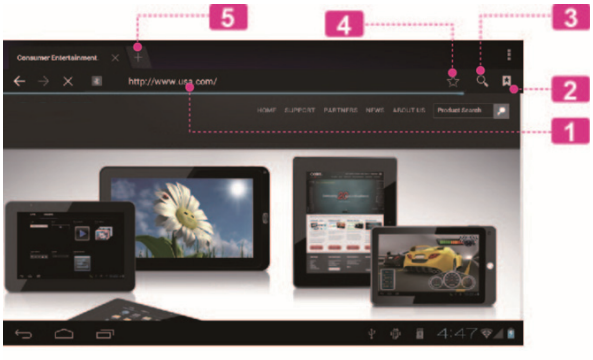
5
4
3
2
1
Consumer Entertainment
http://www.usa.com/
HOME
SUPPORT
PARTNERS
NEWS
ABOUT US
Product Search
4:47

To open Browser, touch the Browser icon on the Home screen or in the Launcher.

Name		Description
1	Address bar	Displays the address (URL) of the current page. Touch the bar to enter a new address or to search the web.
2	**Goto Bookmarks** icon	Touch to view bookmarks, to view your most visited sites, or to view your browser history.
3	**Search** icon	Touch to search with Google browser.
4	**Add Bookmark** icon	Touch to add bookmarks.
5	New Window (+)	Creates new browser window.

Some common Browser actions are described below.

To go to a webpage.

1. Touch the **Address bar** at the top of the Browser screen. The keyboard will open automatically. (If the Address bar is not visible, drag the page down to return to the top of the Browser screen.)	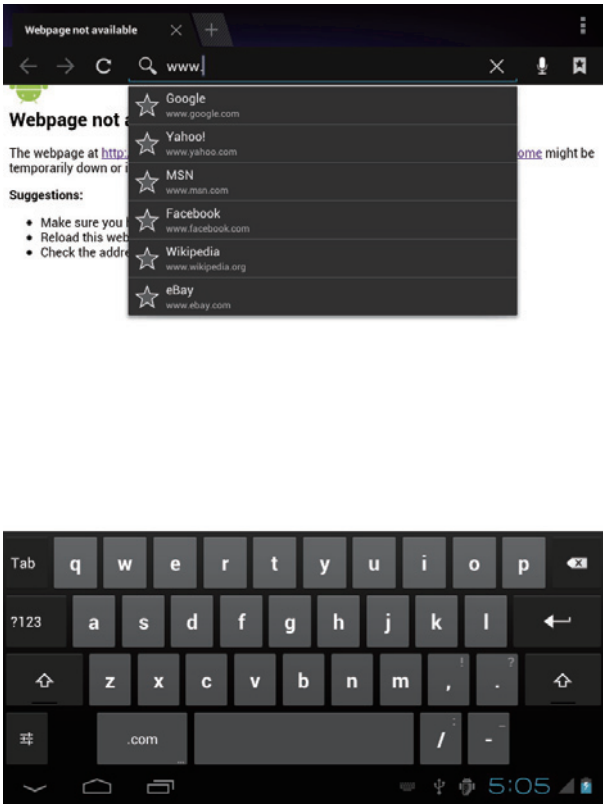
2. Use the keyboard to enter the ad-dress (URL) of the webpage (e.g., www.pendo.com.au).	
3. Touch **Enter** key to open the webpage.	

Webpage not available
www.
Webpage not
The webpage at http:
temporarily down or i
might be
Suggestions:
Make sure you
Reload this web
Check the addr
Google
www.google.com
Yahoo!
www.yahoo.com
MSN
www.msn.com
Facebook
www.facebook.com
Wikipedia
www.wikipedia.org
eBay
www.ebay.com
Tab
?123
.com
5:05

◆ **To bookmark a webpage**.

Bookmark your favorite webpages in order to visit them quickly without entering a URL.

1. Go to the webpage that you want to bookmark	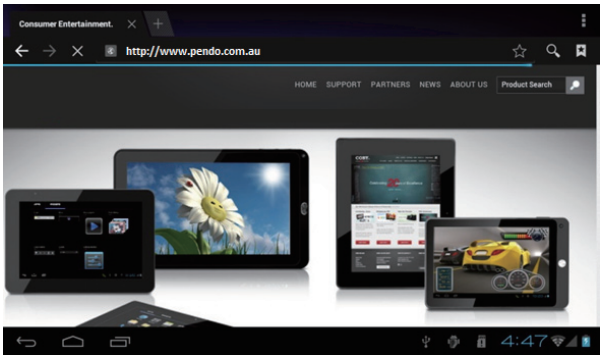

Consumer Entertainment.
http://www.pendo.com.au
HOME
SUPPORT
PARTNERS
NEWS
ABOUT US
Product Search
4:47

2. Touch the **Add Bookmark** icon.	☆
3. If desired, you can modify the name of the bookmark or its location (URL address). Otherwise, touch **OK** to finish adding the book-mark.	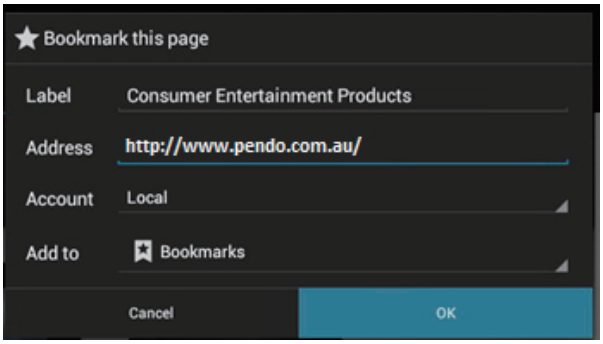 ★ Bookmark this page Label: Consumer Entertainment Products Address: http://www.pendo.com.au/ Account: Local Add to: Bookmarks Cancel OK

◆ **To go to a bookmarked webpage.**

1. Touch the **Goto Bookmark** icon.	★
2. Touch a bookmark tile to open it.	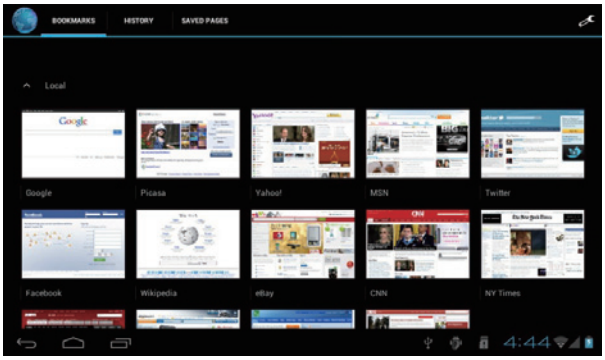 BOOKMARKS HISTORY SAVED PAGES Local Google Picasa Yahoo! MSN Twitter Facebook Wikipedia eBay CNN NY Times 4:44

◆ **To delete a bookmarked webpage.**

1. Touch the **Goto Bookmark** icon.	☆

2. Touch and hold a bookmark tile to open the option menu.	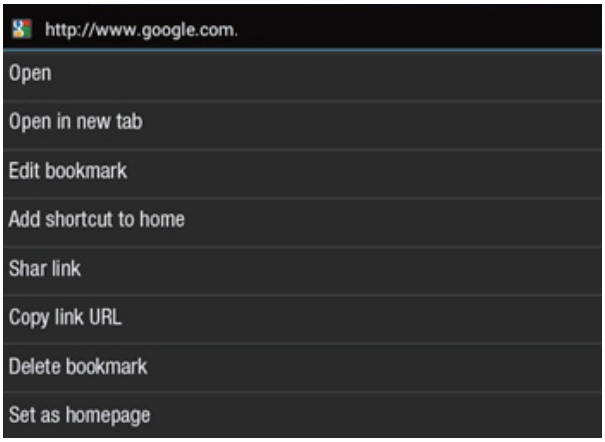 http://www.google.com. Open Open in new tab Edit bookmark Add shortcut to home Shar link Copy link URL Delete bookmark Set as homepage
3. Touch “Delete bookmark“.	 Delete Delete bookmark “Google”? Cancel OK
4. Touch “OK” to confirm.	

Browser menu

While viewing a webpage, touch the icon show as right to open the Browser Menu, the icon is located on the top right corner of the screen, the options are: ⋮

- Refresh: Refresh the current webpage.
- Forward: Go to the next webpage.
- New tab: Open the webpage in a new window, under a new tab.
- New incognito tab: Open the webpage in a new window, under a new tab, and the pages you view in the new window will not appear in your browser history or search history. See the on-screen explanation of going incognito.
- Share page: Use Email to send the webpage URL.
- Find on page: Search for content on the current page.
- Request desktop site:

- Save for offline reading: Save this page onto the internal memory, then you can read it when the internet connection is disabled.
- Page info: View information about the current page, including the URL.
- Settings: Customise the Browser.

Managing Applications

Downloading and installing new applications to your Pendo Pad can extend its functionality in many ways.

You can download and install applications from the included Applications store. To open the Applications store:

1. Touch the **Launcher** icon.
2. Touch the **Apps Marketplace** icon.



When installing an application, it will tell you what functions it needs to control and if it needs access to your data. Make sure you review these access requirements carefully before completing the installation.

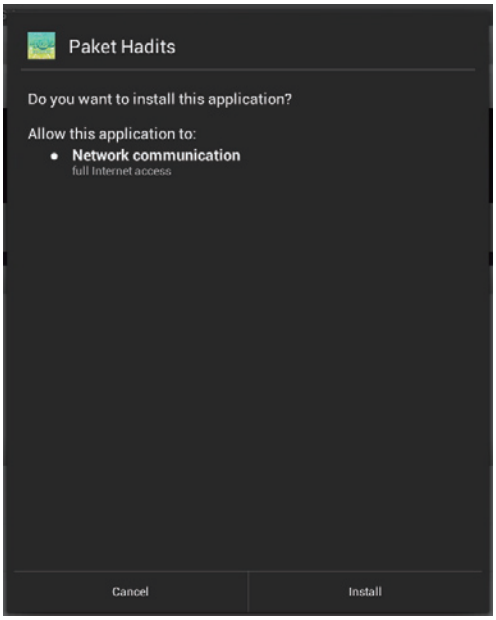

Paket Hadits

Do you want to install this application?

Allow this application to:

- **Network communication**
  full Internet access

Be especially cautious with applications that request access to many functions or to a significant amount of your data. You are responsible for the results of applications installed on your pad.

- You can learn more about GetJar, and browse for applications by visiting their website at www.getjar.com.

Some developers allow you to download and install applications directly from their website.

Your Pendo Mobile Internet Device may include access to, or information on, content, products, applications and services from third parties. Your use of such third party content, products, applications and services is at the discretion of such third party and expressly governed by such third party's terms of use, including any such third party's privacy policies, for such content, products, applications and services. Pendo is not responsible for and expressly disclaims all warranties of any kind with respect to all such third party content, products, applications and services. Pendo will not be responsible for any loss, costs, or damages incurred due to your access to or use of third party content, products, applications or services.

To uninstall an application:

1. From the Home screen, touch the **Launcher Tab**.
2. Touch Settings to open the **Settings** menu.
3. Touch **Apps**, a list of all applications installed on the pad will display on screen.

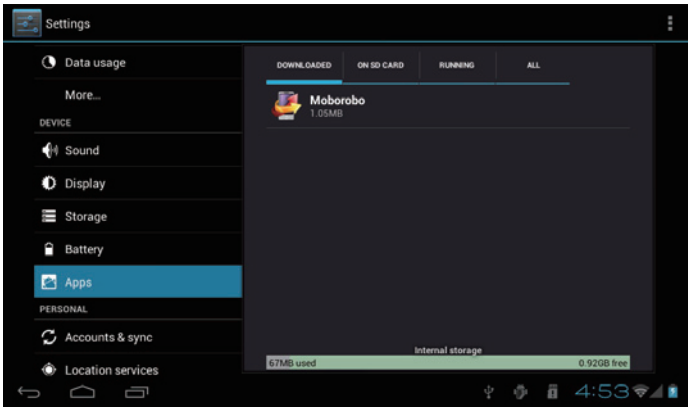
Settings
Data usage
More...
DEVICE
Sound
Display
Storage
Battery
Apps
PERSONAL
Accounts & sync
Location services
DOWNLOADED
ON SD CARD
RUNNING
ALL
Moborobo
1.05MB
Internal storage
67MB used
0.92GB free
4:53

4. Touch the name of the application you want to uninstall; the Application Info screen will open.

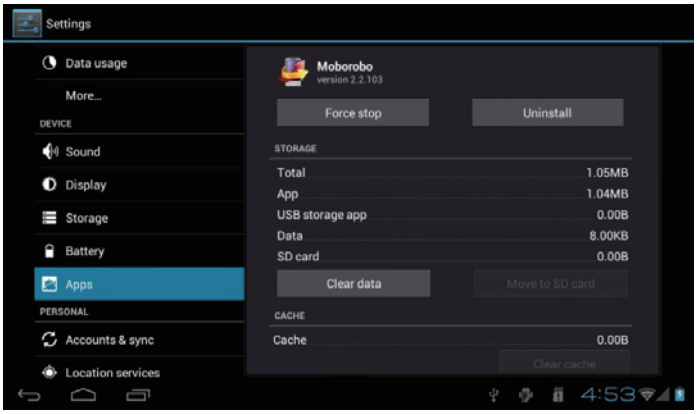
Settings
Data usage
More...
DEVICE
Sound
Display
Storage
Battery
Apps
PERSONAL
Accounts & sync
Location services
Moborobo
version 2.2.103
Force stop
Uninstall
Clear data
Move to SD card
Clear cache
4:53

STORAGE

Total 1.05MB
App 1.04MB
USB storage app 0.00B
Data 8.00KB
SD card 0.00B

CACHE

Cache 0.00B

5. Touch **Uninstall**. The pad will prompt you to confirm.

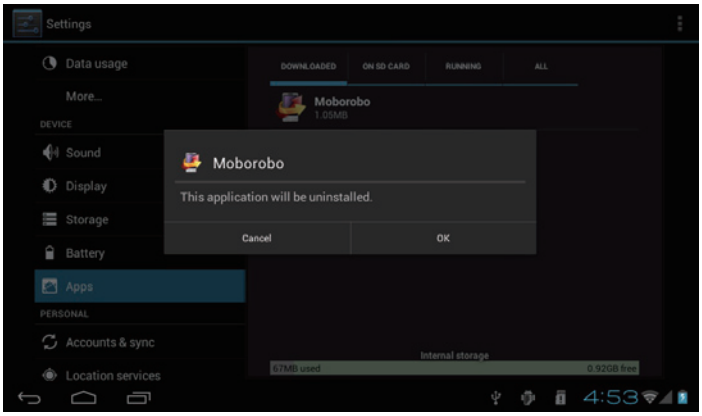
Settings
Data usage
More...
DEVICE
Sound
Display
Storage
Battery
Apps
PERSONAL
Accounts & sync
Location services
DOWNLOADED
ON SD CARD
RUNNING
ALL
Moborobo
1.05MB
Cancel
OK
Internal storage
67MB used
0.92GB free
4:53

Moborobo

This application will be uninstalled.

6. Touch **OK** to uninstall the application.

*Or you can uninstall an application from the Launcher screen directly. Touch and hold an application icon until the **Uninstall** icon* Uninstall *appears, drag the application icon to the **Uninstall** icon to uninstall the application.*

Optional Connections

Connecting to a Computer

Connect the pad to a computer to transfer files.

1. **Connect your pad to the computer.**

With the included USB cable:

Plug the small end of the cable into the USB 2.0 Hi- speed connector of the pad.

Plug the large end of the cable into an available USB 2.0 Hi-speed port on the computer.

When your pad is connected, a USB icon will appear in the Notification bar.



Touch the Notification bar to open the notifications panel.

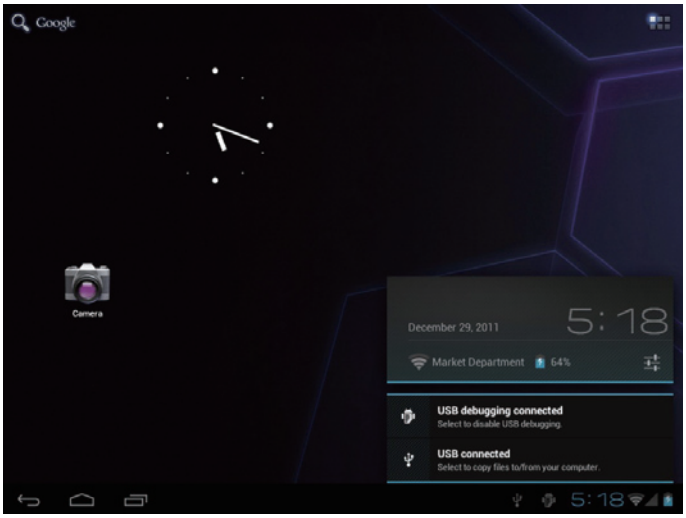

USB debugging connected
Select to disable USB debugging.

USB connected
Select to copy files to/from your computer.

The pad's "mass storage mode" is compatible with many operating systems including: Microsoft® Windows® XP, Vista, 7 or higher and Mac OS or Linux.

2. **Mount the storage drive.**

◆ Touch **USB connected** to mount the pad's built-in storage, then touch "Turn on USB storage" and "OK" when prompted to confirm. When mounted, you can copy files to/from your computer to it.

Your pad will be recognised by the computer as a Removable Storage drive. Drag and drop files between your pad and the computer. To learn more about copying files, please refer to the documentation included with your computer or operating system.

Connecting to a TV

Connect to a TV to enjoy your pad from the comfort of your living room. An HDMI cable (Type A-to-Type C) is required to connect the pad to a TV.

The pad will recognise and match the capabilities of the TV automatically.

To connect the pad to the TV:

1. Plug the small end of the HDMI cable into the mini HDMI connector of the pad.
2. Plug the large end of the HDMI cable into the HDMI port on the TV.
3. Turn on the TV, and set its display mode to the HDMI port that the pad is connected to.

The pad's display will be output to the TV screen.

> *If you need help setting the display mode of the TV, please refer to the documentation provided by the TV manufacturer.*

Connecting Headphones

Connect a pair of headphones (or earphones) to the pad to enjoy media in private.

Lower the volume level of the pad before connecting headphones, and then slowly raise the volume to a comfortable listening level.

- The headphones must have a 3.5 mm (1/8 in) plug.
- When headphones are connected, speaker output will be disabled automatically.

> *Hearing experts advise against the constant use of personal stereos played at high volume. Constant exposure to high volumes can lead to hearing loss. If you should experience ringing in the ears or hearing loss, discontinue use*

and seek medical advice.

Hearing experts advise against the constant use of personal stereos played at high volume. Constant exposure to high volumes can lead to hearing loss. If you should experience ringing in the ears or hearing loss, discontinue use and seek medical advice.

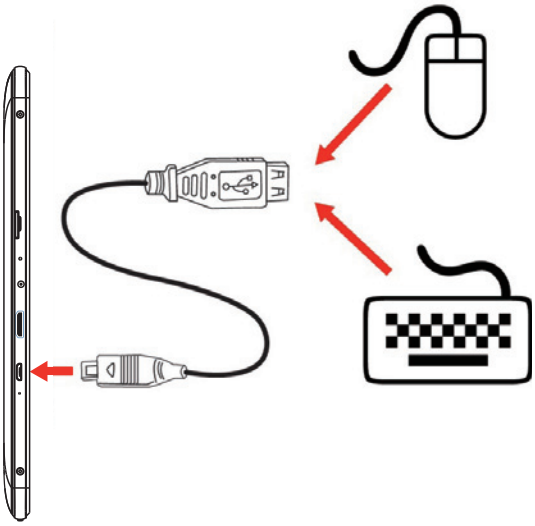

Using the USB Full-Size Adapter

The USB full-size adapter can be used to connect and use USB devices with the pad. The adapter converts the mini USB port on the pad into a USB On-the-Go (OTG) connector.

Connecting a Keyboard

For times when you want to type for an extended period of time, you may want to connect a full-size keyboard to the pad.

Use the included USB full-size (Type A) adapter to connect a keyboard to the pad.

You may also use this connection to add a mouse to the pad.

The adapter supports one connection at a time. To use a keyboard and mouse simultaneously, you will need to add an external USB hub.

Connecting a Storage Device

Use the included USB full-size (Type A) adapter to connect a storage device to the pad (e.g., a USB flash memory drive).

This connection supports a maximum storage size of 16 GB. For additional storage capacity, a microSDHC card can be added to the pad.

Setting the System Options

Open the system settings menu to adjust how the pad looks and functions.

> *Many applications will have their own settings; refer to the documentation provided by the application developer to learn more.*

To open the Settings menu:

1. From the Home screen, touch the **Launcher Tab**.
2. Touch **Settings** to open the Settings menu.

The settings are grouped by category. Touch a category to open and adjust its settings on the right side.

> *Please refer to the manual for a description of the items in the Settings menu.*

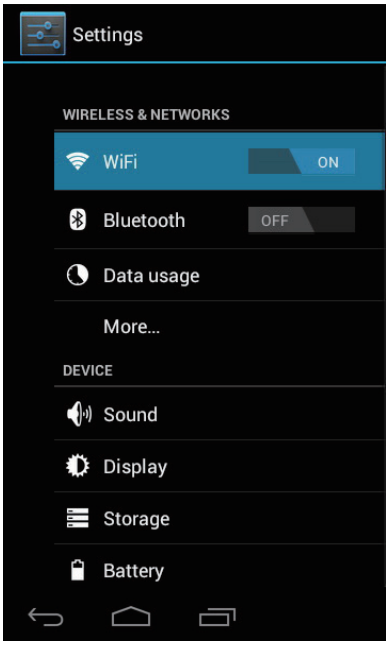
Settings
WIRELESS & NETWORKS
Data usage
More...
DEVICE
Sound
Display
Storage
Battery

WiFi ON

Bluetooth OFF

Specifications

Please visit www.pendo.com.au for the latest product information. Design, specifications, and manual are subject to change without notice.

Processor	Amlogic AML8726-MX(Dual core)
RAM	1GB
Storage	8GB flash built-in microSDHC card slot (max. 32GB supported)
Display	9.7" TFT LCD (1024 x 768), capacitive touchscreen
Networking	Wi-Fi (802.11 b/g/n)/Bluetooth
Video Output	Mini HDMI, type C (1080p and 720p supported)
Audio Output	3.5 mm headphone
PC Interface	USB 2.0 Hi-speed (microUSB connector)
Additional Features	Camera Built-in microphone Stereo speaker
Operating System	Android 4.0 (Ice Cream Sandwich)
Power	Rechargeable Li-poly battery Power Adapter (DC 5V)
Playback Time (hours) *	Up to 10 hours music, 4.5 hours video, 5.5 hours web browsing

---

* *Music was tested with a 128 kbps MP3 file; video was tested with a 1920 x 1080 MPEG-4/AVC file; browsing was tested with the screen brightness set to default. Actual playback results may vary.*

Support

If you have a problem with this device, please check our website at www.pendo.com.au for Frequently Asked Questions (FAQ) and product updates. If these resources do not resolve the problem, please contact Technical Support.

Pendo Technical Support

Email:	support@pendo.com.au
Web:	www.pendo.com.au
Phone:	1300 275 645, Monday-Friday (9:00AM-5:00PM EST)